

Gottwald HMK170E

Capacity	63T@10m – 20T@40m
Year	1997
Hours	Hydraulic pump 18000h / hoisting 10000h / slewing 7000h
Engine	Detroit Diesel
Spreader	Bromma EH12
Good working condition	

Radius	Lifting Capacities				
	Normal load	Heavy load	Special load	Spreader	Grab
m	(t)	(t)	(t)	(t)	(t)
10	45.0	63.0	63.0	35.0	20.0
11	45.0	63.0	63.0	35.0	20.0
12	45.0	63.0	63.0	35.0	20.0
13	45.0	63.0	63.0	35.0	20.0
14	45.0	63.0	63.0	35.0	20.0
15	45.0	63.0	63.0	35.0	20.0
16	45.0	63.0	63.0	35.0	20.0
17	45.0	63.0	63.0	35.0	20.0
18	45.0	61.8	63.0	35.0	20.0
19	45.0	60.9	62.9	35.0	20.0
20	45.0	62.6	66.1	35.0	20.0
21	45.0	48.8	64.0	35.0	20.0
22	45.0	45.5	60.3	35.0	20.0
23	42.6	42.6	47.0	35.0	20.0
24	39.9	39.9	44.1	31.1	20.0
25	37.5	37.5	41.5	28.9	20.0
26	35.4	35.4	39.1	29.8	20.0
27	33.4	33.4	37.0	24.8	20.0
28	31.7	31.7	35.0	23.1	20.0
29	30.0	30.0	33.2	21.4	20.0
30	28.5	28.5	31.5	19.9	20.0
31	27.1	27.1	30.0	18.5	20.0
32	25.8	25.8	28.6	17.2	19.6
33	24.6	24.6	27.2	16.0	18.7
34	23.5	23.5	26.0	14.9	17.9
35	22.5	22.5	24.9	13.9	17.1
36	21.5	21.5	23.8	12.9	16.3
37	20.6	20.6	22.8	12.0	15.7
38	19.7	19.7	21.8	11.1	15.0
39	18.7	18.7	20.7	10.1	14.3
40	17.7	17.7	19.7	9.1	13.5



The lifting capacity charts in the columns are to be understood as follows:

1. Normal load, Heavy load, Special load = Load under hook
2. Grab under hook swivel gear = Load under hook
3. Container load = Load under spreader