

# Gottwald HMK260E

Capacity	80T@10m – 26T@44m
Year	1997
Hours	Hydraulic pump 24000h / hoisting 14000h / slewing 11000h / engine 14000h
Engine	Detroit Diesel
Spreader	Bromma EH5
Very good working condition	



Radius							
	Normal load	Grab	Spreader	Special load	Heavy-duty load	Spreader	Grab
	66.6 %	50 %	66.6 %	75 %	66.6 %	66.6 %	50 %
10	45.0	28.0	35.0	80.0	80.0	35.0	28.0
11	45.0	28.0	35.0	80.0	80.0	35.0	28.0
12	45.0	28.0	35.0	80.0	80.0	35.0	28.0
13	45.0	28.0	35.0	80.0	80.0	35.0	28.0
14	45.0	28.0	35.0	80.0	80.0	35.0	28.0
15	45.0	28.0	35.0	80.0	80.0	35.0	28.0
16	45.0	28.0	35.0	80.0	80.0	35.0	28.0
17	45.0	28.0	35.0	80.0	80.0	35.0	28.0
18	45.0	28.0	35.0	80.0	80.0	35.0	28.0
19	45.0	28.0	35.0	80.0	80.0	35.0	28.0
20	45.0	28.0	35.0	80.0	80.0	35.0	28.0
21	45.0	28.0	35.0	80.0	80.0	35.0	28.0
22	45.0	28.0	35.0	80.0	75.5	35.0	28.0
23	45.0	28.0	35.0	79.1	70.2	35.0	28.0
24	45.0	28.0	35.0	73.8	65.5	35.0	28.0
25	45.0	28.0	35.0	69.0	61.3	35.0	28.0
26	45.0	28.0	35.0	64.8	57.6	35.0	28.0
27	45.0	28.0	35.0	61.0	54.2	35.0	28.0
28	45.0	28.0	35.0	57.5	51.1	35.0	28.0
29	45.0	28.0	35.0	54.3	48.3	35.0	28.0
30	43.4	28.0	34.8	51.5	45.8	35.0	28.0
31	41.2	26.8	32.6	48.8	43.4	34.8	28.0
32	39.2	25.6	30.6	46.4	41.2	32.6	26.8
33	37.4	24.5	28.8	44.1	39.2	30.6	25.6
34	35.6	23.5	27.0	42.0	37.4	28.8	24.5
35	34.0	22.6	25.4	40.0	35.6	27.0	23.5
36	32.5	21.7	23.9	38.2	34.0	25.4	22.6
37	31.1	20.9	22.5	36.5	32.5	23.9	21.7
38	29.8	20.1	21.2	34.9	31.1	22.5	20.9
39	28.6	19.4	20.0	33.4	29.8	21.2	20.1
40	27.4	18.7	18.8	32.0	28.6	20.0	19.4
41	26.3	18.1	17.7	30.7	27.4	18.8	18.7
42	25.2	17.5	16.6	29.5	26.3	17.7	18.1
43	24.2	17.0	15.6	28.3	25.2	16.6	17.5
44	23.0	16.3	14.4	27.2	24.2	15.6	17.0
				26.1	23.0	14.4	16.3

The lifting capacities in the columns are to be understood as follows:

1. Normal, Heavy-duty, Special operation = Load under hook
2. Grab under hook swivel gear = Load under hook
3. Container operation = Load below spreader